CS6 Drill Template

Please go to Truetone.com for a video of how to mount your CS6.

TRUETONE®

1 SP🔌T.®

PRO

DRILL HERE

DRILL HERE

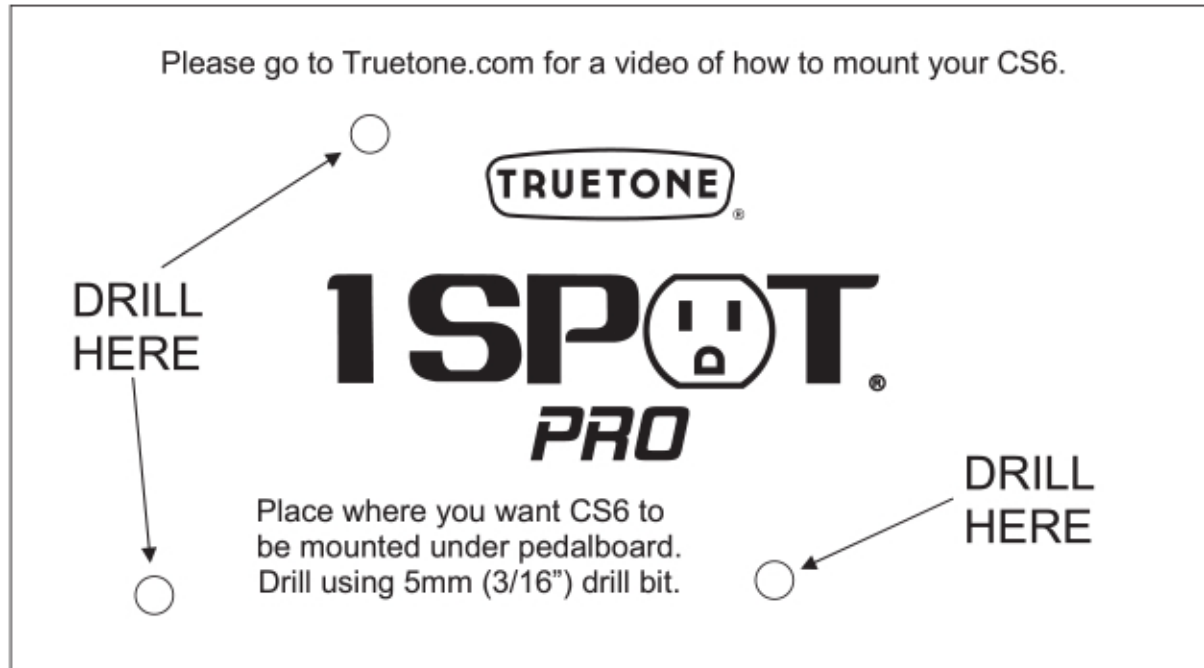Place where you want CS6 to be mounted under pedalboard. Drill using 5mm (3/16") drill bit.

IMPORTANT: Print at Actual (100%) size, not "Fit To Page".